




CR-UDC1 Update Guide

PLEASE NOTE: *Back up any config file before starting the update process!*


1. Obtain the CYP Discovery Tool found in the downloads tab of the products web page.
2. Log into the units Web GUI, (the default login and password is 'admin').
3. Click the main dashboard icon in the top right corner.



4. Select the cog icon on the left side of the page, and then click "System".

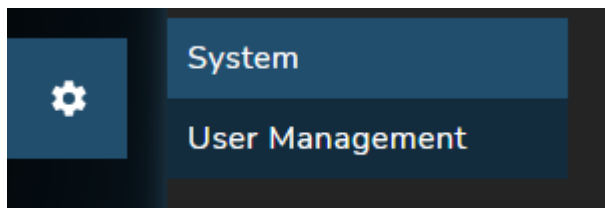

5. Scroll down to the bottom of the page and select "Version" and then "Update".

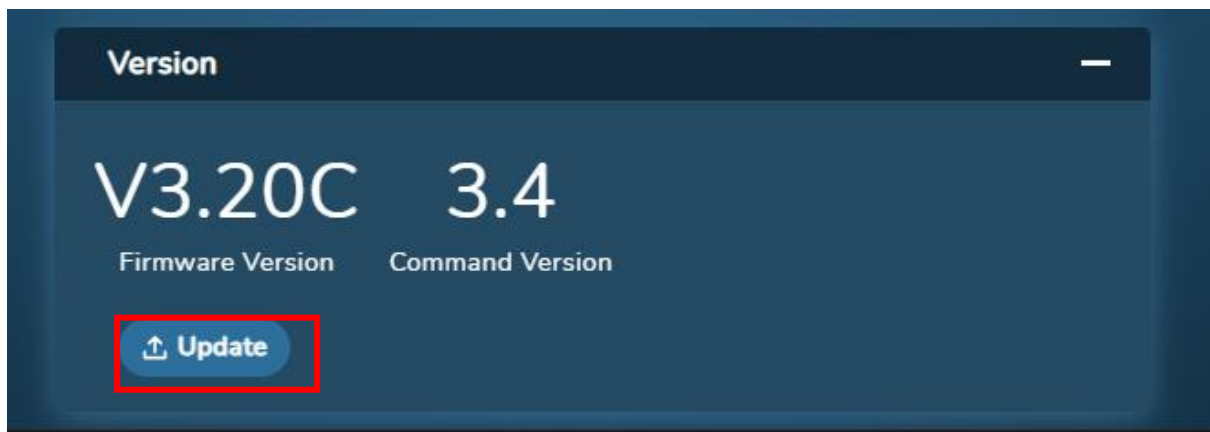

6. Select the .BIN firmware file to upload and confirm the download.
7. Once unit has been updated a firmware update success text box should appear on screen, and when going back to the "Version" tab, the firmware version should have changed.